

Robylink Wireless Temperature Probe Internal Switch Settings

		Switch				
		1	2	3	4	5
1	Probe Number	Off	Off	Off	Off	Off
2		On	Off	Off	Off	Off
3		Off	On	Off	Off	Off
4		On	On	Off	Off	Off
5		Off	Off	On	Off	Off
6		On	Off	On	Off	Off
7		Off	On	On	Off	Off
8		On	On	On	Off	Off
9		Off	Off	Off	On	Off
10		On	Off	Off	On	Off
11		Off	On	Off	On	Off
12		On	On	Off	On	Off
13		Off	Off	On	On	Off
14		On	Off	On	On	Off
15		Off	On	On	On	Off
16		On	On	On	On	Off
17		Off	Off	Off	Off	On
18		On	Off	Off	Off	On
19		Off	On	Off	Off	On
20		On	On	Off	Off	On
21		Off	Off	On	Off	On
22		On	Off	On	Off	On
23		Off	On	On	Off	On
24		On	On	On	Off	On
25		Off	Off	Off	On	On
26		On	Off	Off	On	On
27		Off	On	Off	On	On
28		On	On	Off	On	On
29		Off	Off	On	On	On
30		On	Off	On	On	On
31		Off	On	On	On	On
32		On	On	On	On	On

		Switch		
		6	7	8
1	Zone	Off	Off	Off
2		On	Off	Off
3		Off	On	Off
4		On	On	Off
5		Off	Off	On
6		On	Off	On
7		Off	On	On
8		On	On	On